


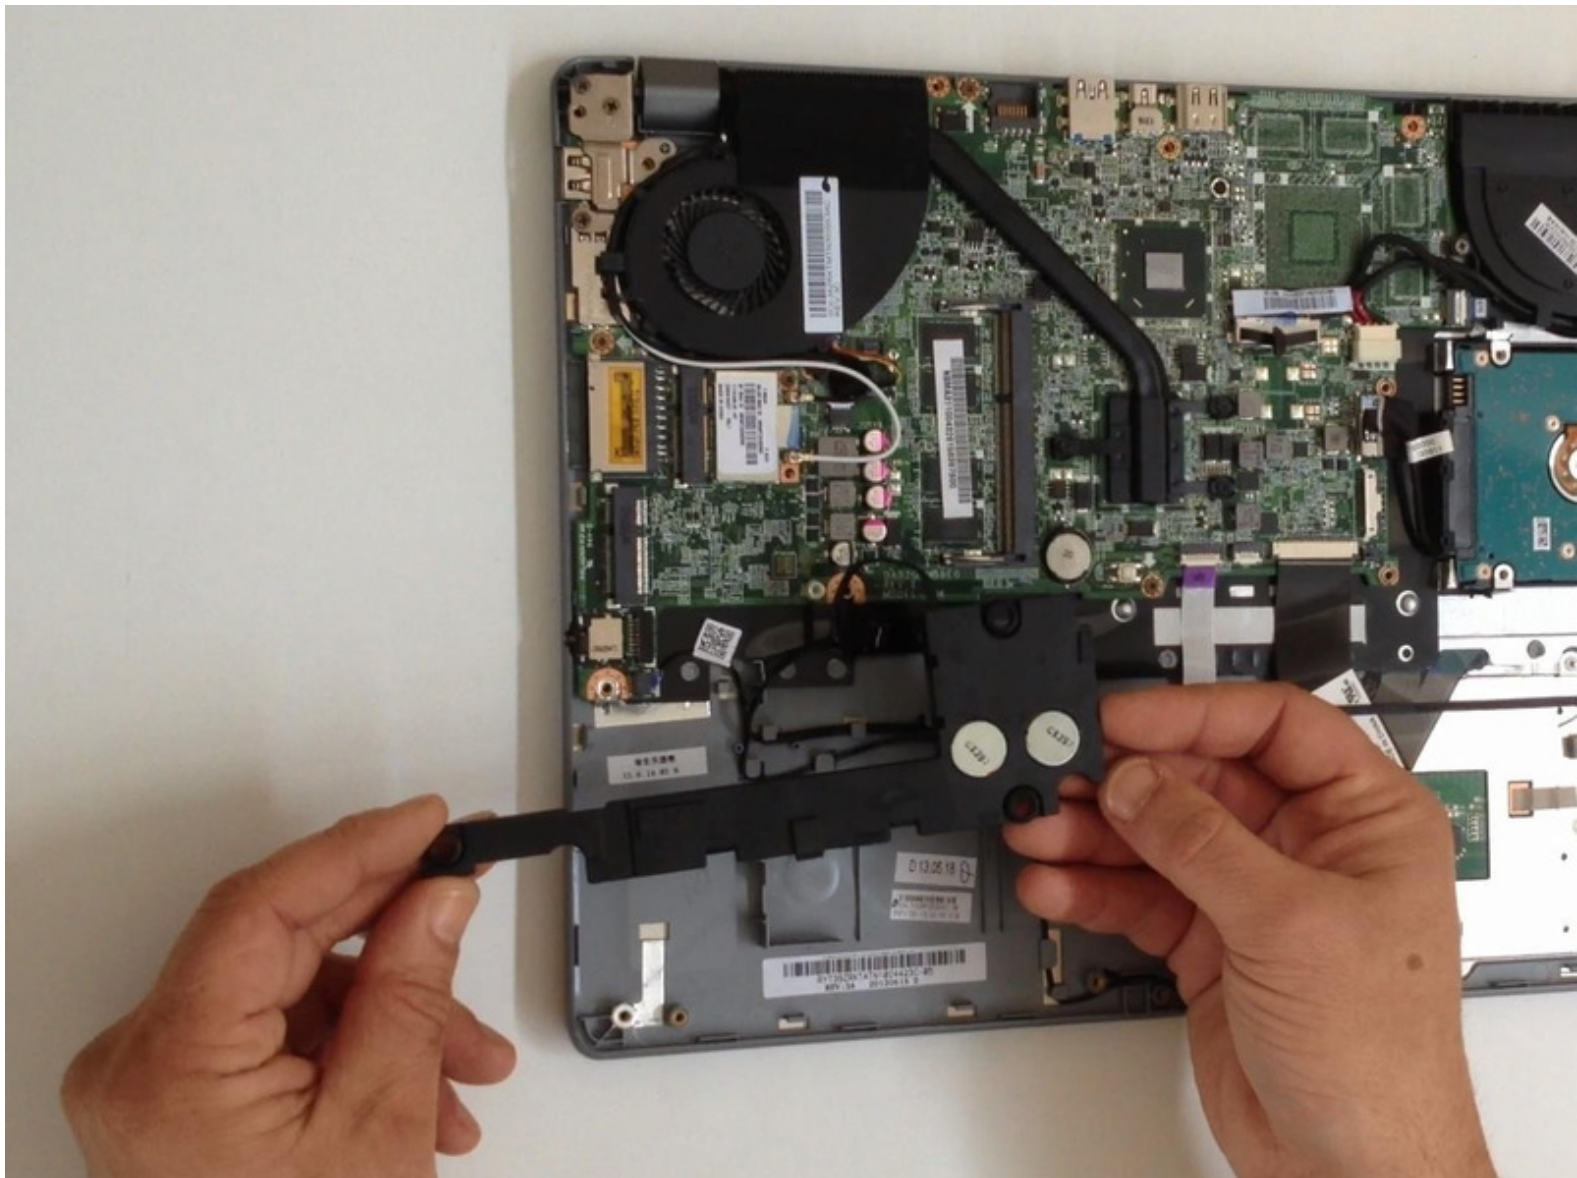

Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Acer Aspire V5-572, V5-572G Loudspeakers and Microphone Replacement

Written By: ZFix



INTRODUCTION

Acer Aspire - V5-572, V5-572G

How to disassemble the Laptop and change the Loudspeaker modules.

[Please SUBSCRIBE to my channel ツ](#)


[video: <http://youtu.be/Sg8tUXZL864>]



TOOLS:



- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [iFixit Opening Picks set of 6](#) (1)
-

Step 1 — Bottom Cover

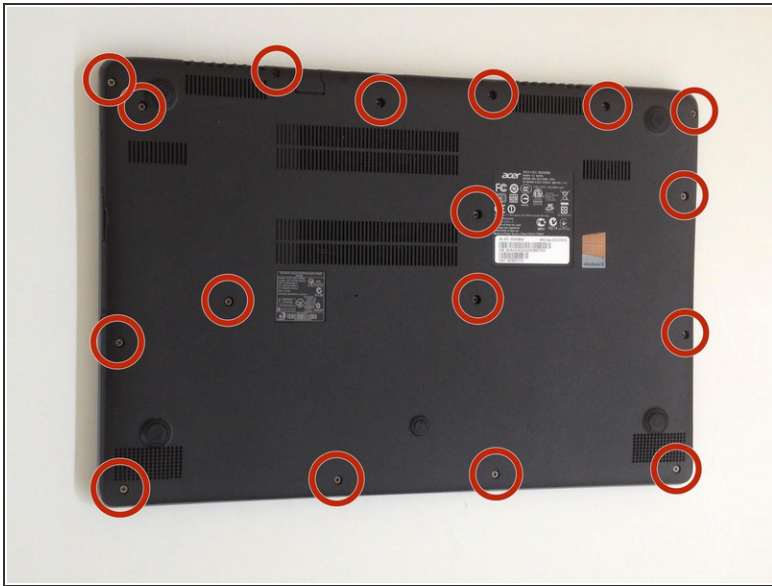


- Switch-off the Laptop.
- Remove 17x Philips screws.

Step 2

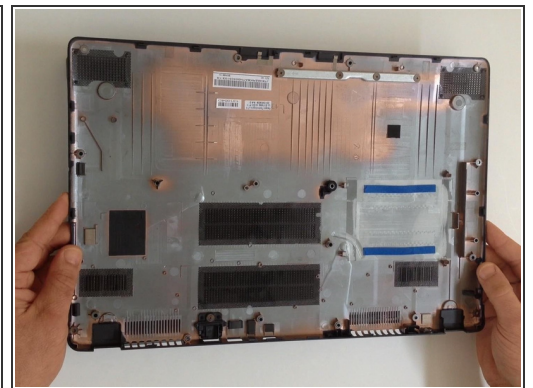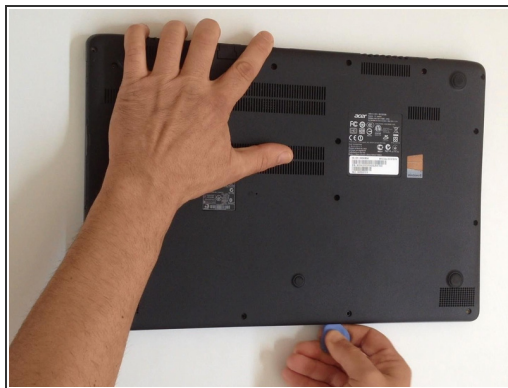

- Start opening from the SD Memory Card hole
- ⚠ Use plastic tools to avoid damaging the cover.




Step 3

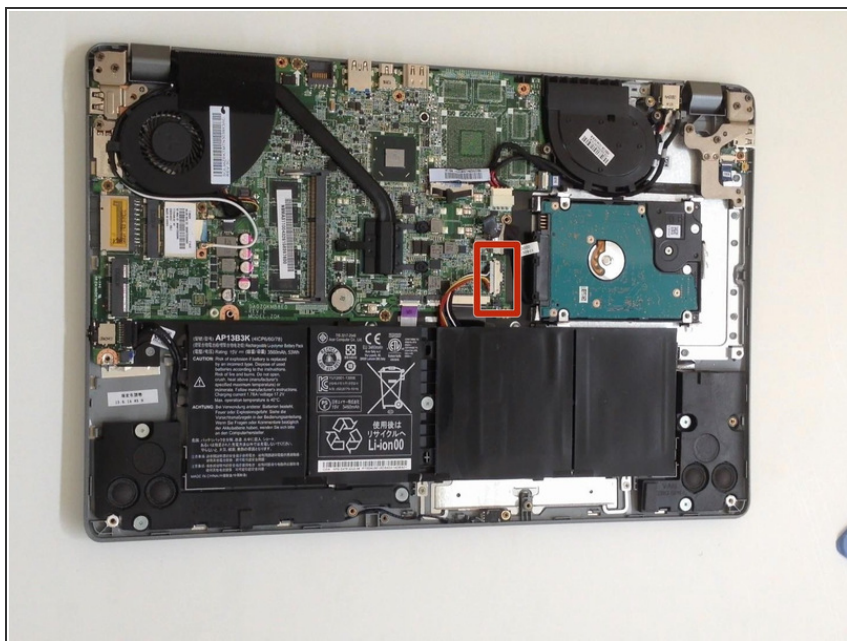

⚠ Before doing anything, disconnect the battery.

★ [Please SUBSCRIBE to my channel](#) ツ


Step 4 — Battery

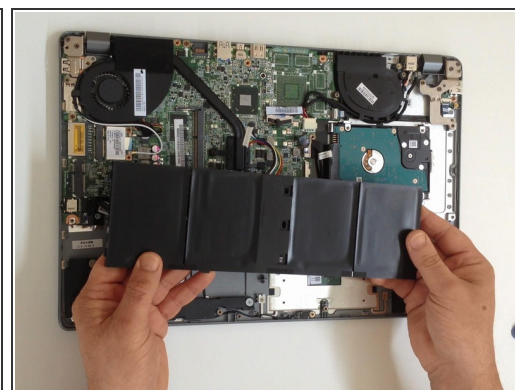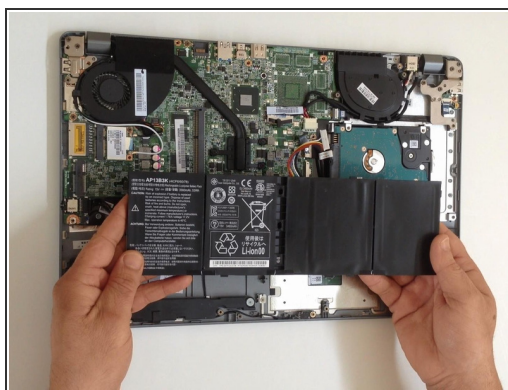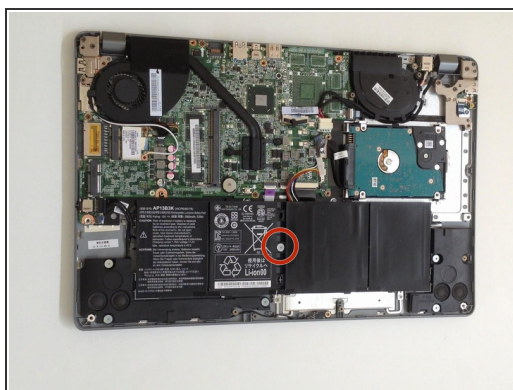

- The battery is held by one Philips screw.
- Li-polymer Battery Pack, 15V, 3650 mAh

★ [Please SUBSCRIBE to my channel](#) ツ

Step 5 — Loudspeakers and Microphone

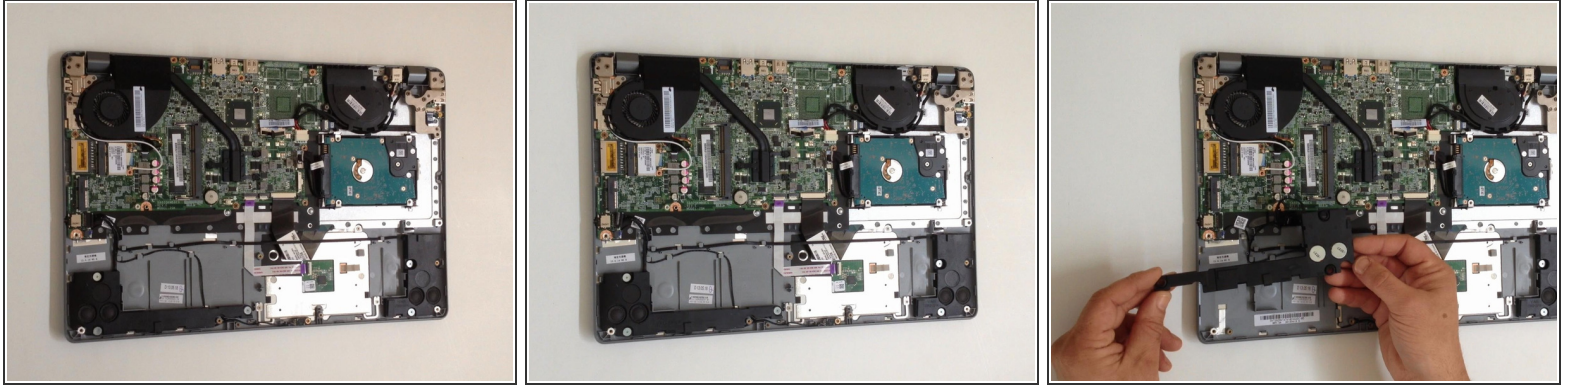

- Disconnect the Loudspeakers cable.
- There are two modules with loudspeakers, connected with one wire.
- Unscrew the screws and remove the Loudspeaker modules together with the cable.



[Please SUBSCRIBE to my channel ツ](#)

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-16 04:42:39 AM.